



JDP-13

DRILL PRESS

50000212M....230/50/1

PARTS LIST



JPW Tool Group Hong Kong Limited

98 Granville Road, Tsimshatsui East, Kowloon, Hong Kong, PRC
www.jettools.com

Импортер в РФ: ООО «ИТА Технолоджи»


105082, Москва, Переведеновский пер., д. 17
www.jettools.ru

Made in PRC / Сделано в КНР

P-50000212M

2022-09

Parts Breakdown for JDP-13 Drill Press

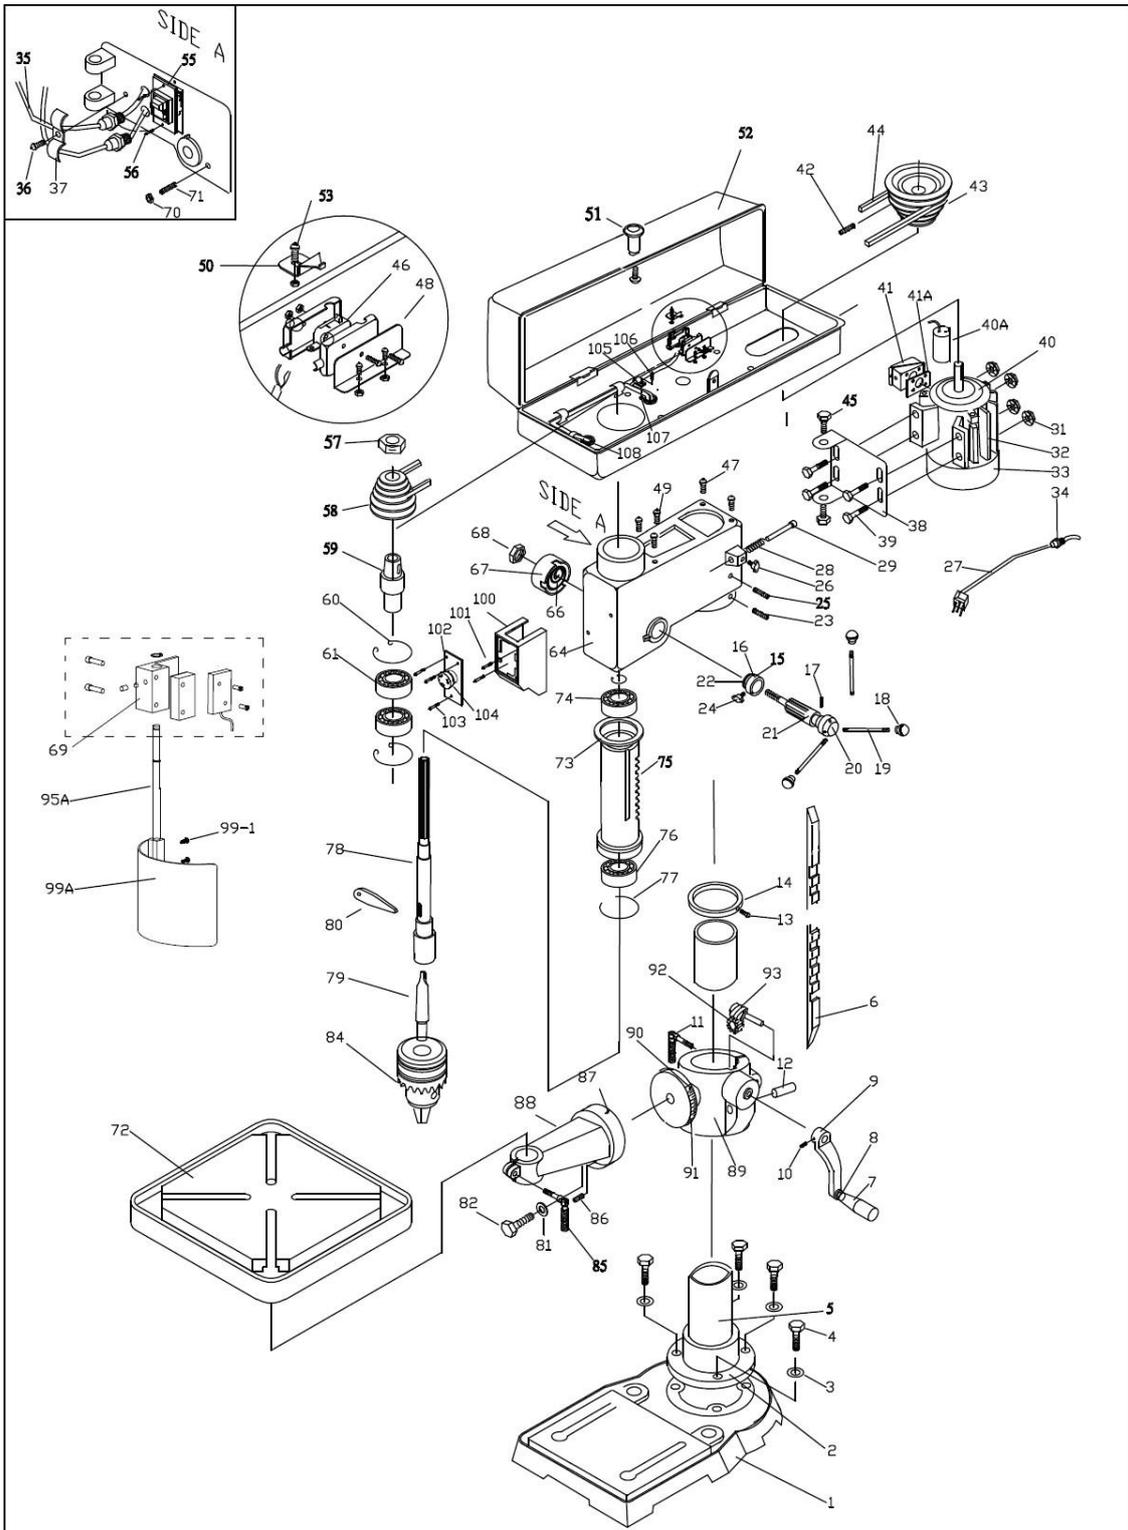

Parts List for JDP-13 Drill Press

Index No	Part No	Description	Size	Qty
1	JDP13-001	Base Plate		1
2	JDP13-002	Flange		1
3	JDP13-003	Washer	φ8	4
4	JDP13-004	Screw	M8x25	4
5	JDP13-005	Column		1
6	JDP13-006	Rack		1
7	JDP13-007	Knob		1
8	JDP13-008	Nut	M10	1
9	JDP13-009	Shifting Rod		1
10	JDP13-010	Screw	M6x10	1
11	JDP13-011	Lock Handle		1
12	JDP13-012	Shaft		1
13	JDP13-013	Screw	M6x16	1
14	JDP13-014	Rack Collar		1
15	JDP13-015	Scale Sleeve		1
16	JDP13-016	Rivet		1
17	JDP13-017	Pin	M5x20	2
18	JDP13-018	Handle		3
19	JDP13-019C	Handle Bar		3
20	JDP13-020	Handle Base		1
21	JDP13-021	Feed Shaft		1
22	JDP13-022	Scale		2
23	JDP13-023	Screw	M8x10	1
24	JDP13-024	Knob		1
25	JDP13-025	Screw	M8x10	1
26	JDP13-026	Screw	M8x15	1
27	JDP13-027	Power Cord		1
28	JDP13-028	Spring		1
29	JDP13-029	Rod		1
31	JDP13-031	Nut	M8	4
32	JDP13-032	Fan		1
33	JDP13-033	Fan Cover		1
34	JDP13-034	Cable Holder		3
35	JDP13-035	Cable		1
36	JDP13-036	Screw	M5x10	1
37	JDP13-037	Clip		1
38	JDP13-038	Motor Support		1
39	JDP13-039	Screw	M8x25	4
40	JDP13-040	Motor	230V, 50Hz	1
40A	JDP13-040A	Capacitor		1
41	JDP13-041	Terminal Box		1

41A	JDP13-041A	Gasket		1
42	JDP13-042	Set Screw	M6x10	1
43	JDP13-043	Motor Pulley		1
44	JDP13-044	V-belt		1
45	JDP13-045	Screw	M8x25	2
46	JDP13-046	Micro Switch		1
47	JDP13-047	Screw	M6x10	4
48	JDP13-048	Switch Plate		1
49	JDP13-049	Screw	M6x10	2
50	JDP13-050	Plate		1
51	JDP13-051	Handle		1
52	JDP13-052	Pulley Cover		1
53	JDP13-053	Screw	M6x10	1
55	JDP13-055	ON/OFF Switch		1
56	JDP13-056	Screw	M4x10	2
57	JDP13-057	Nut	1/2	1
58	JDP13-058	Pulley Spindle		1
59	JDP13-059	Shaft & Taper Sleeve		1
60	JDP13-060	C ring	φ38	2
61	JDP13-061	Ball Bearing	BB-6203ZZ	2
64	JDP13-064	Head Case		1
66	JDP13-066	Spring		1
67	JDP13-067	Spring Cover		1
68	JDP13-068	Nut	M12	1
69	JDP13-069	Limit Switch Assembly		1
70	JDP13-070	Screw	M8x32	1
71	JDP13-071	Nut	M8	1
72	JDP13-072	Table		1
73	JDP13-073	Washer	φ40	1
74	JDP13-074	Ball Bearing	BB-6201ZZ	1
75	JDP13-075	Spindle Guide		1
76	JDP13-076	Ball Bearing	BB-6204ZZ	1
77	JDP13-077	Ring	φ45	1
78	JDP13-078	Spindle		1
79	JDP13-079	Taper		1
80	JDP13-080	Wedge		1
81	JDP13-081	Washer	φ16	1
82	JDP13-082	Screw	M6x35	1
84	JDP13-084	Keyless Chuck	B16	1
85	JDP13-085	Clamping Screw		1
86	JDP13-086	Screw	M5x10	1
87	JDP13-087	Arrow		1
88	JDP13-088	Arm		1
89	JDP13-089	Table Bracket		1

90	JDP13-090	Rivet	1	
91	JDP13-091	Scale	1	
92	JDP13-092	Gear	1	
93	JDP13-093	Worm	1	
95A	JDP13-095	Mounting Bar	1	
99A	JDP13-099A	Chip Guard	1	
99-1	JDP13-099	Screw	2	
100	JDP13-100	Cover	1	
101	JDP13-101	Screw	M5x10	2
102	JDP13-102	Plate	1	
103	JDP13-103	Screw	M4x16	3
104	JDP13-104	Emergency Stop Switch	1	
105	JDP13-105	Clamping	1	
106	JDP13-106	Screw	M4x14	1
107	JDP13-107	Nut	M4	1
108	JDP13-108	Cable	1	

Wiring Diagram

JDP-13.....50000212M

Symbol	Meaning of Symbol
L1, L2	Cable
SB1	ON Switch
SB2	OFF Switch
M	Motor
PE	Ground Wire
SB3	Emergency Stop Switch
SB4, SB5	Limit Switch

